MB960

Intel ® Sandy Bridge / PCH
ATX Motherboard

USER'S MANUAL

Version 1.0A

Acknowledgments

AMI is a registered trademark of American Megatrends Inc.
PS/2 is a trademark of International Business Machines Corporation.
Intel and Intel® Sandy Bridge DC/QC Processor are registered trademarks of Intel Corporation.
Microsoft Windows is a registered trademark of Microsoft Corporation.
Fintek is a registered trademark of Fintek Electronics Corporation.
All other product names or trademarks are properties of their respective owners.

Table of Contents

Introduction 1

Product Description 1
Checklist 2
MB960 Specifications 3
Board Dimensions 4

Installations 5

Installing the CPU 6
Installing the Memory 7
Setting the Jumpers 8
Connectors on MB960 12

BIOS Setup 19

Drivers Installation 45

Intel Chipset Software Installation Utility 46
VGA Drivers Installation 47
Realtek HD Audio Driver Installation 48
LAN Drivers Installation 49
Intel® Management Engine Interface 51
ASMedia USB 3.0 Drivers 53

Appendix 54

A. I/O Port Address Map 54
B. Interrupt Request Lines (IRQ) 55
C. Watchdog Timer Configuration 56

This page is intentionally left blank.

Introduction

Product Description

The MB960F ATX motherboard is based on the latest Intel® Q67 chipset. The platform supports 2nd generation Intel® Core processor family with LGA1155 packing and features an integrated dual-channel DDR3 memory controller as well as a graphics core.

The latest Intel® processors provide advanced performance in both computing and graphics quality. This meets the requirement of customers in the gaming, POS, digital signage and server market segment.

The Q67 platform is made with 32-nanometer technology that supports Intel's first processor architecture to unite the CPU and the graphics core on the transistor level. The MB960F ATX board utilizes the dramatic increase in performance provided this Intel's latest cutting-edge technology. Measuring 305mm x 244mm, the MB960F offers fast 6Gbps SATA support (2 ports), USB3.0 (2 ports) and interfaces for DVI-D, DVI-I and HDMI displays. MB960AF features Intel Active Management Technology 7.0.

MB960F FEATURES:

- Supports Intel® 2nd Generation Core i7/i5/i3 QC/DC desktop processors
- Four DDR3 DIMM, 1066/1333MHz, Max. 16GB memory
- Dual Intel® PCI-Express Gigabit LAN
- Integrated Graphics for DVI-I, DVI-D/HDMI displays
- 4x SATA 2.0, 2x SATA 3.0, 14x USB 2.0, USB 3.0 (2 ports), 4x COM, Watchdog timer
- 1x PCI-E (x16), 1x PCI-E (x4), 4x PCI, 1x ISA
- Optional AMT (MB960AF only)

Checklist

Your MB960 package should include the items listed below.

- The MB960 ATX motherboard
- This User's Manual
- 1 CD containing chipset drivers and flash memory utility
- Serial ATA cable

MB960 Specifications

Product Name	MB960AF/MB960F
Form Factor	ATX
CPU Type	- Intel® Sandy Bridge 32nm QC/DC DT processor w/ IMC & Gfx - LGA package[37.5 mm x 37.5mm](TDP: QC= 95W/65W ; DC = 65W) **Sandy Bridge-DT is NOT socket compatible with Clarkdale/Lynnfield
CPU Speed	Up to 3.1GHz
Cache	Up to 8MB
CPU Socket	**LGA1155 (Socket H2)**
Chipset	Intel® Q67 PCH 27 x 27 mm package size
BIOS	AMI BIOS, support ACPI Function
Memory	Intel® 2nd generation Core™ i7/i5/i3 QC/DC mobile processor integrated controller DDRIII 1067/1333 MHz - DIMM x 4 (w/o ECC), Max.16GB
VGA	- Intel® 2nd generation Core™ i7/i5/i3 mobile processor integrated Gfx • DVI-I X 1 (thru Level shifter ASM1442) • DVI-D X 1 (thru Level shifter ASM1442) • HDMI X 1 (thru Level shifter ASM1442)
LAN	1. Intel® Lewisville 82579LM GbE PHY [MI960AF only] or 82579**V** GbE PHY [MI960F only] 2. Intel® 82583V as 2nd GbE
USB	USB 2.0 host controller, supports 14 ports w/ two EHCI - 4 ports in the rear panel - Others reserved for onboard pin header (10 ports, 2.54mm pitch) USB 3.0 host controller [ASMedia # ASM1042], support 2 ports - 2 ports in the rear panel
Serial ATA	Intel® Q67 PCH built-in SATA controller, supports total 6 ports 2 x SATA (3.0) 6Gbps+ 4 x SATA (2.0) 3Gbps ports (2 FIS based Port Multiplier)
Audio	Intel® Q67 PCH built-in High Definition Audio controller + ALC892 w/ 7.1 CH
LPC I/O	Fintek F81865-I **(Ver. C)** COM1 (RS232/422/485), COM2/COM3/COM4 (RS232), Hardware Monitor (2 thermal inputs,4 voltage monitor inputs & 2 Fan headers) COM1/2 with pin-9 with power for 2 ports (500 mA for each port)
Digital IO	4 in & 4 out
IAMT(7.0)	Intel® Q67 PCH built-in **(MI960AF only)** - Intel® Active Management Technology ver. 7.0
TPM 1.2	Winbond WPCT210A **(MB960AF only)**
PCI to ISA	ITE IT8888G x 1 for high ISA bus
PATA	JMicron JMB368 (PCI-e to PATA) x1 for 1 PATA channel - CF x1 (Horizontal type)
Expansion Slots	- PCI-Express (16x) x1 [PEG]; PCI-Express (4x) x1; PCI x4; ISA x1
Edge Connectors	DVI-D + DVI-I stack connector; Dual DB9 stack connector for COM #1, #2 Dual USB (3.0) dual stack connector; HDMI stack connector Gigabit LAN RJ-45 + dual USB (2.0) stack connector x2 RCA Jack 3 x 1 for HD Audio
Onboard Header/ Connector	2 ports x SATA **III** [Blue color]; 4 ports x SATA II 2x5 pin-header x5 for 10 ports USB; 2x5 pin-header for front panel audio 2x10 pin-header for COM3 (RS232) & COM4 (RS232) 2x5 pin-header for Digital IO
Watchdog Timer	Yes (256 segments, 0, 1, 2…255 sec/min)
System Voltage	**ATX**
Others	LAN Wakeup, EuP feature (Fintek F75160), UL 60950-1 2nd Edition compatible
Board Size	305mm x 244mm

Board Dimensions

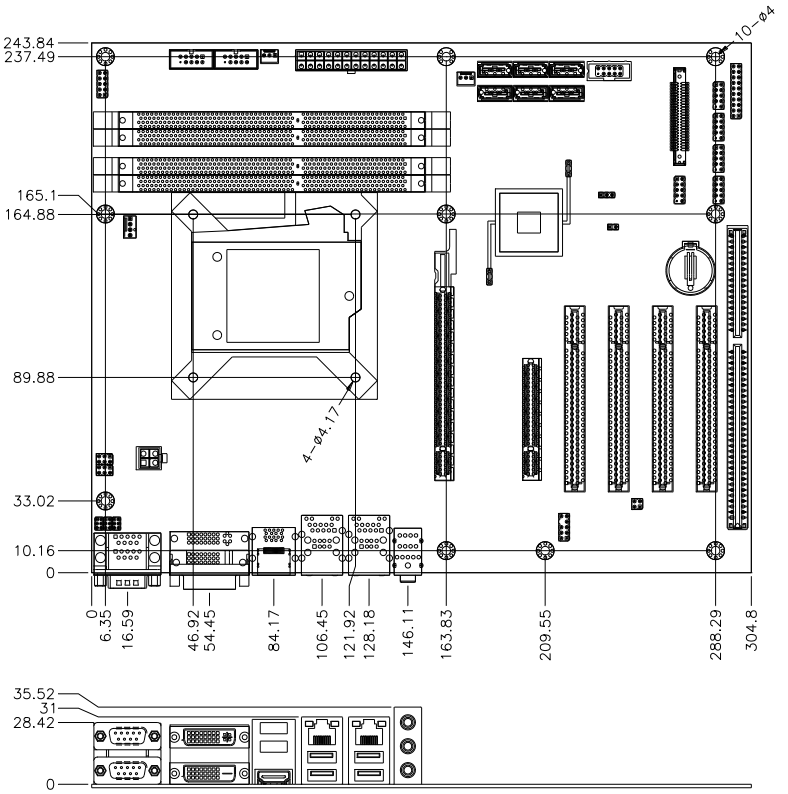

Installations

This section provides information on how to use the jumpers and connectors on the MB960 in order to set up a workable system. The topics covered are:

Installing the CPU 6
Installing the Memory 7
Setting the Jumpers 8
Connectors on MB960 12

Installing the CPU

The MB960 board supports an LGA1155 Socket (shown below) for Intel Sandy Bridge processors.

To install the CPU, unlock first the socket by pressing the lever sideways, then lift it up to a 90-degree. Then, position the CPU above the socket such that the CPU corner aligns with the gold triangle matching the socket corner with a small triangle. Carefully insert the CPU into the socket and push down the lever to secure the CPU. Then, install the heat sink and fan.

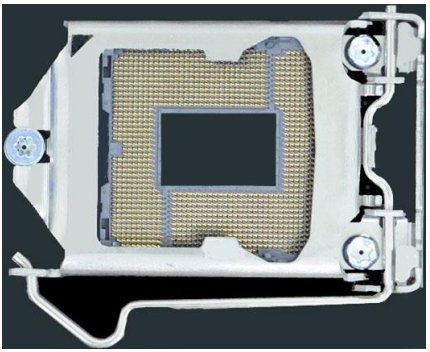

***NOTE**: Ensure that the CPU heat sink and the CPU top surface are in total contact to avoid CPU overheating problem that would cause your system to hang or be unstable.*

Installing the Memory

The MB960 board supports four DDR3 memory socket for a maximum total memory of 16GB in DDR3 DIMM memory type.

Installing and Removing Memory Modules

To install the DDR3 modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR3 module so that the key of the DDR3 module aligned with that on the memory slot.
2. Gently push the DDR3 module in an upright position until the clips of the slot close to hold the DDR3 module in place when the DDR3 module touches the bottom of the slot.
3. To remove the DDR3 module, press the clips with both hands.

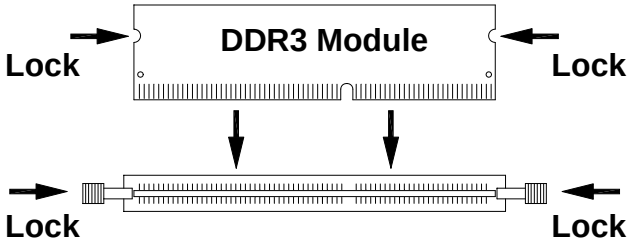

Setting the Jumpers

Jumpers are used on MB960 to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on MB960 and their respective functions.

Jumper Locations on MB960 9
JP1, JP2, JP3: RS232/RS422/RS485 (COM1) Selection 10
JP4: COM1 RS232 RI/+5V/+12V Power Setting 10
JP5: COM2 RS232 RI/+5V/+12V Power Setting 10
JP8: Flash Descriptor Security Overide (Factory use only) 11
JBAT1: Clear CMOS Contents 11

Jumper Locations on MB960

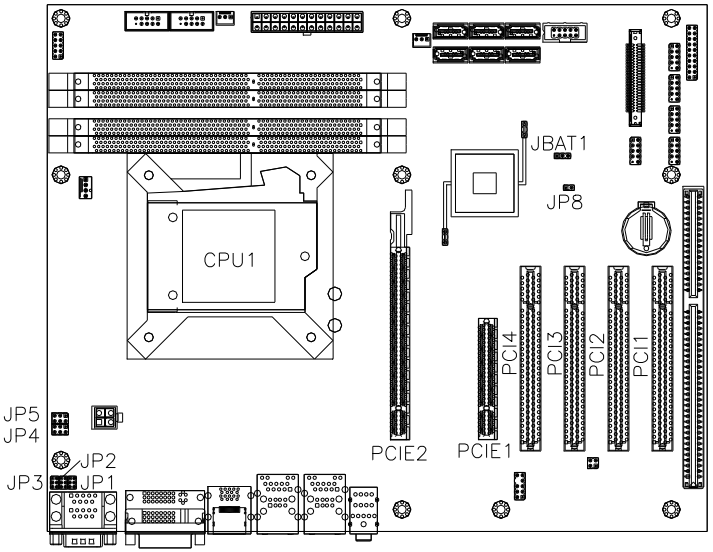

Jumpers on MB960.....Page
JP1, JP2, JP3: RS232/RS422/RS485 (COM1) Selection 10
JP4: COM1 RS232 RI/+5V/+12V Power Setting..... 10
JP5: COM2 RS232 RI/+5V/+12V Power Setting..... 10
JP8: Flash Descriptor Security Override (Factory use only)..... 11
JBAT1: Clear CMOS Contents..... 11

JP1, JP2, JP3: RS232/RS422/RS485 (COM1) Selection



COM1 Function	RS-232	RS-422	RS-485
Jumper Setting (Pin closed)	JP1: 3-5&4-6 JP3: 1-2 JP2: 3-5 & 4-6	JP1: 1-3&2-4 JP3: 3-4 JP2: 1-3 & 2-4	JP1: 1-3&2-4 JP3: 5-6 JP2: 1-3 & 2-4

JP4: COM1 RS232 RI/+5V/+12V Power Setting

JP4	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	RI
	Pin 5-6 Short/Closed	+5V

JP5: COM2 RS232 RI/+5V/+12V Power Setting

JP5	Setting	Function
	Pin 1-2 Short/Closed	+12V
	Pin 3-4 Short/Closed	RI
	Pin 5-6 Short/Closed	+5V

JP8: Flash Descriptor Security Override (Factory use only)

JP8	Flash Descriptor Security Override
Open	Disabled (Default)
Close	Enabled

JBAT1: Clear CMOS Contents

JBAT1	Setting	Function
	Pin 1-2 Short/Closed	Normal
	Pin 2-3 Short/Closed	Clear CMOS

Connectors on MB960

Connector Locations on MB960 13
CN2: COM1 and COM2 Serial Ports 14
CN3: DVI-D and DVI-I Connector 14
CN5: USB3.0 Connector 15
CN1: HDMI Connector 15
CN7: Gigabit LAN (Intel 82579LM) + USB 2/3 15
CN6: Gigabit LAN (Intel 82583V) + USB 0/1 15
CN4: HD Audio Connector 15
J16: Digital I/O 16
J18: ATX Power Supply Connector 16
J19, J20: COM3, COM4 RS232 Serial Ports 16
J3: ATX 12V Power Connector 16
J6, J7, J10, J12, J14: USB Connectors 17
J2: SPDIF I/O 17
J1: Audio Pin Header for Chassis Front Panel 17
J15: Front Panel Function Connector 17
CPU_FAN1: CPU Fan Power Connector 18
SYS_FAN1: System Fan1 Power Connector 18
SYS_FAN2: System Fan2 Power Connector 18
CN9, CN10, CN11, CN12, CN13, CN14: SATA Connectors 18
CN8: Compact Flash Connector 18
J17: SPI Flash Connector (Factory use only) 18
J4: ISA Slot (shared with PCI1) 18
PCIE2: PCI-E X16 Slot 18
PCIE1: PCI-E X8 Slot (X4 Link) 18
PCI1-PCI4: PCI 32-bit Slot 18

Connector Locations on MB960

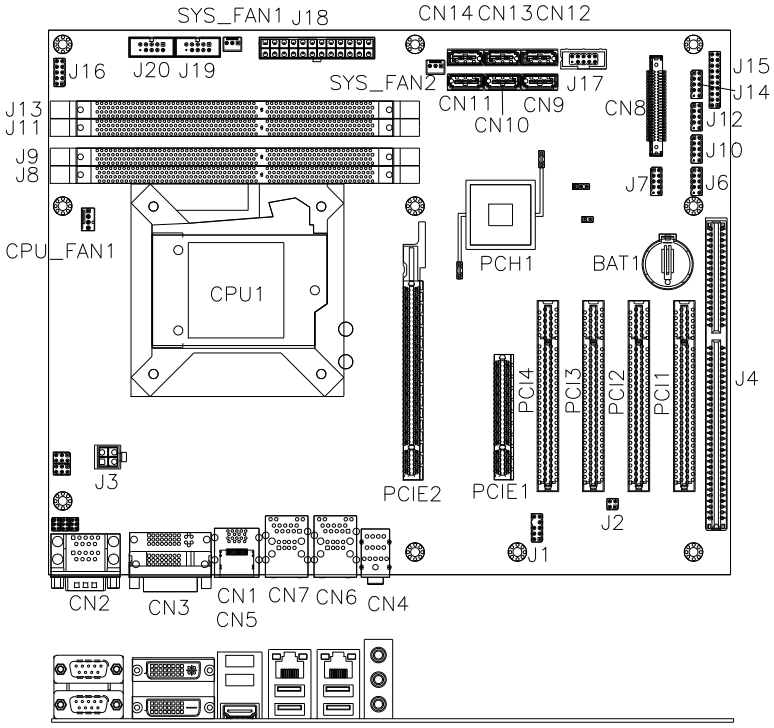

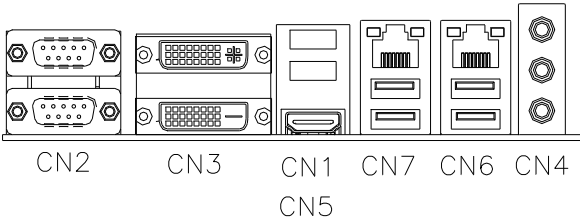

CN2: COM1 and COM2 Serial Ports

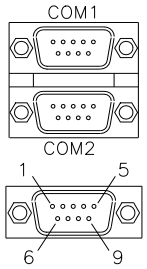

Pin #	Signal Name		
	RS-232	R2-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	DTR	RX-	NC
5	Ground	Ground	Ground
6	DSR	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	RI	NC	NC
10	NC	NC	NC

CN3: DVI-D and DVI-I Connector

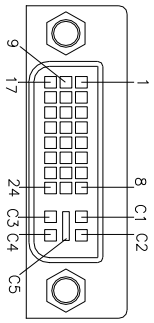

Signal Name	Pin #	Pin #	Signal Name
DATA 2-	1	16	HOT POWER
DATA 2+	2	17	DATA 0-
Shield 2/4	3	18	DATA 0+
DATA 4-	4	19	SHIELD 0/5
DATA 4+	5	20	DATA 5-
DDC CLOCK	6	21	DATA 5+
DDC DATA	7	22	SHIELD CLK
VSYNC	8	23	CLOCK -
DATA 1-	9	24	CLOCK +
DATA 1+	10	C1	Red
SHIELD 1/3	11	C2	Green
DATA 3-	12	C3	Blue
DATA 3+	13	C4	HSYNC
DDC POWER	14	C5	A GROUND2
A GROUND 1	15	C6	A GROUND3

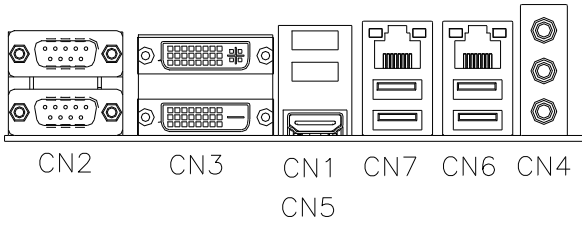

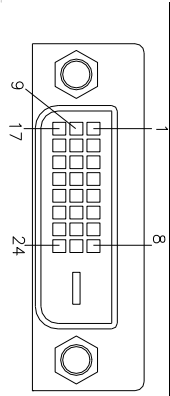

Signal Name	Pin #	Pin #	Signal Name
DATA 2-	1	16	HOT POWER
DATA 2+	2	17	DATA 0-
Shield 2/4	3	18	DATA 0+
DATA 4-	4	19	SHIELD 0/5
DATA 4+	5	20	DATA 5-
DDC CLOCK	6	21	DATA 5+
DDC DATA	7	22	SHIELD CLK
N.C	8	23	CLOCK -
DATA 1-	9	24	CLOCK +
DATA 1+	10	C1	N.C.
SHIELD 1/3	11	C2	N.C.
DATA 3-	12	C3	N.C.
DATA 3+	13	C4	N.C.
DDC POWER	14	C5	N.C.
A GROUND 1	15	C6	N.C.

CN5: USB3.0 Connector

CN1: HDMI Connector

CN7: Gigabit LAN (Intel 82579LM) + USB 2/3

CN6: Gigabit LAN (Intel 82583V) + USB 0/1

CN4: HD Audio Connector

J16: Digital I/O



Signal Name	Pin #	Pin #	Signal Name
GND	1	2	VCC
OUT3	3	4	OUT1
OUT2	5	6	OUT0
IN3	7	8	IN1
IN2	9	10	IN0

J18: ATX Power Supply Connector



Signal Name	Pin #	Pin #	Signal Name
3.3V	11	1	3.3V
-12V	12	2	3.3V
Ground	13	3	Ground
PS-ON	14	4	+5V
Ground	15	5	Ground
Ground	16	6	+5V
Ground	17	7	Ground
-5V	18	8	Power good
+5V	19	9	5VSB
+5V	20	10	+12V

J19, J20: COM3, COM4 RS232 Serial Ports

Signal Name	Pin #	Pin #	Signal Name
DCD#	1	6	DSR#
SIN#	2	7	RTS#
SOUT	3	8	CTS#
DTR#	4	9	RI#
GND	5	X	KEY

J3: ATX 12V Power Connector

This connector supplies the CPU operating voltage.



Pin #	Signal Name
1	Ground
2	Ground
3	+12V
4	+12V

J6, J7, J10, J12, J14: USB Connectors



Signal Name	Pin #	Pin #	Signal Name
VCC	1	2	GND
D0-	3	4	D1-
D0+	5	6	D1+
GND	7	8	GND
KEY	9	10	NC

J2: SPDIF I/O



Pin #	Signal Name
1	SPDIF IN
2	Ground
3	SPDIF OUT
4	Ground

J1: Audio Pin Header for Chassis Front Panel



Signal Name	Pin #	Pin #	Signal Name
MIC IN_L	1	2	Ground
MIC IN_R	3	4	DET
LINE_R	5	6	Ground
Sense	7	8	KEY
LINE_L	9	10	Ground

J15: Front Panel Function Connector



Signal Name	Pin #	Pin #	Signal Name
SPK +	1	2	PWR LED +
NC	3	4	NC
SPK – (GND)	5	6	PWR LED- (GND)
SPK – (GND)	7	8	NC
NC	9	10	NC
NC	11	12	NC
PWR_SW	13	14	PWR_SW
NC	15	16	NC
RST	17	18	GND
HDD LED -	19	20	HDD LED +

CPU_FAN1: CPU Fan Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection
4	Control

SYS_FAN1: System Fan1 Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection

SYS_FAN2: System Fan2 Power Connector



Pin #	Signal Name
1	Ground
2	+12V
3	NC

CN9, CN10, CN11, CN12, CN13, CN14: SATA Connectors

CN8: Compact Flash Connector

J17: SPI Flash Connector (Factory use only)

J4: ISA Slot (shared with PCI1)

PCIE2: PCI-E X16 Slot

PCIE1: PCI-E X8 Slot (X4 Link)

PCI1-PCI4: PCI 32-bit Slot

BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

BIOS Introduction 20
BIOS Setup 20
Advanced Settings 22
Chipset Settings 34
Boot Settings 41
CSM parameters 42
Security Settings 43
Save & Exit Settings 44

BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM supports Intel processors. The BIOS provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the <Del> key immediately allows you to enter the Setup utility. If you are a little bit late pressing the <Del> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

```
Press  <DEL>  to  Enter  Setup
```

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Warning: *It is strongly recommended that you avoid making any changes to the chipset defaults. These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could cause the system to become unstable and crash in some cases.*

Main Settings

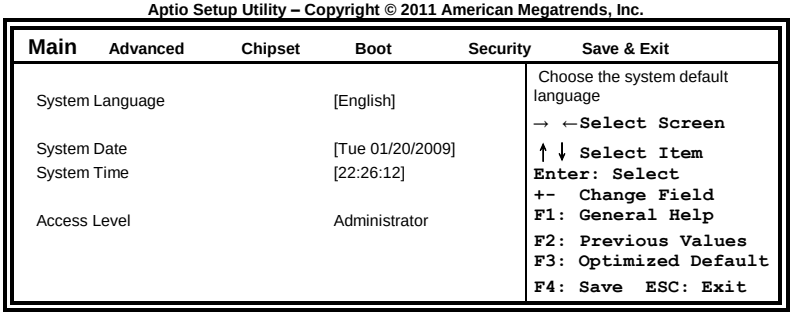

System Language

Choose the system default language.

System Date

Set the Date. Use Tab to switch between Data elements.

System Time

Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

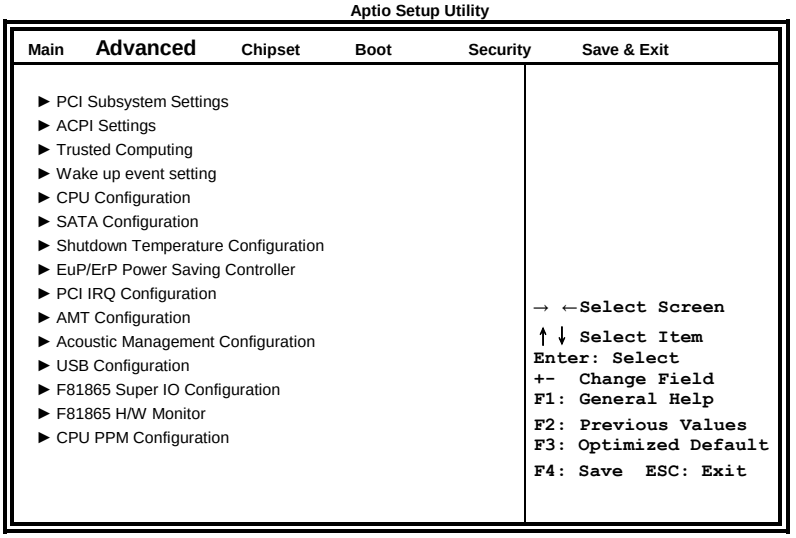

PCI Subsystem Settings

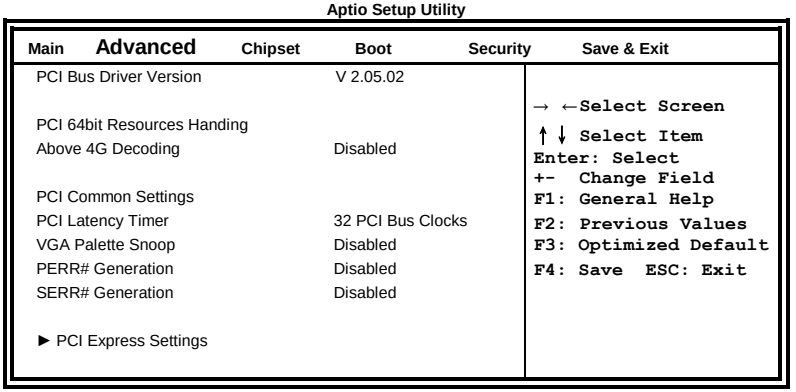

Above 4G Decoding

Enables or Disables 64bit capable devices to be decoded in above 4G address space (only if system supports 64 bit PCI decoding).

PCI Latency Timer
Value to be programmed into PCI Latency Timer Register.

VGA Palette Snoop
Enables or disables VGA Palette Registers Snooping.

PERR# Generation
Enables or disables PCI device to generate PERR#.

SERR# Generation
Enables or disables PCI device to generate SERR#.

PCI Express Settings
Change PCI Express devices settings.

PCI Express Settings

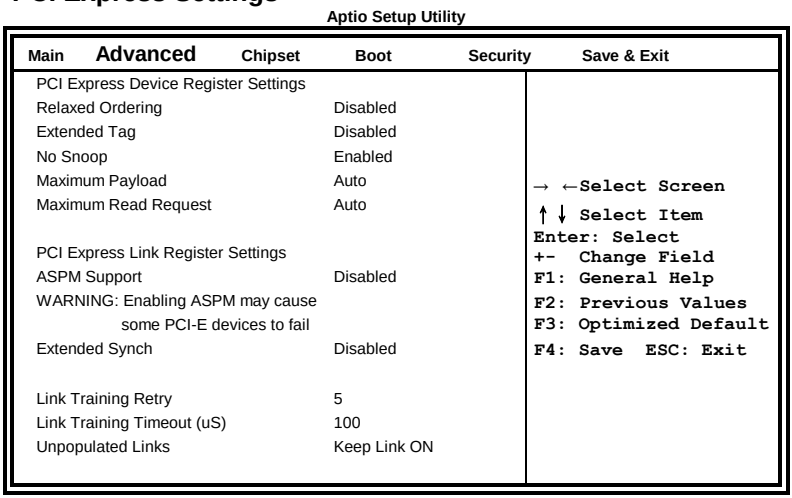

Relaxed Ordering
Enables or disables PCI Express Device Relaxed Ordering.

Extended Tag
If ENABLED allows device to use 8-bit Tag field as a requester.

No Snoop
Enables or disables PCI Express Device No Snoop option.

Maximum Payload
Set Maximum Payload of PCI Express Device or allow System BIOS to select the value.

Maximum Read Request
Set Maximum Read Request Size of PCI Express Device or allow System BIOS to select the value.

ASPM Support
Set the ASPM Level: Force L0s – Force all links to L0s State:
AUTO – BIOS auto configure ： DISABLE – Disables ASPM.

Extended Synch
If ENABLED allows generation of Extended Synchronization patterns.

Link Training Retry
Defines number of Retry Attempts software will take to retrain the link if previous training attempt was unsuccessful.

Link Training Timeout (uS)
Defines number of Microseconds software will wait before polling 'Link Training' bit in Link Status register. Value range from 10 to 1000 uS.

Unpopulated Links
In order to save power, software will disable unpopulated PCI Express links, if this option set to 'Disable Link'.

ACPI Settings

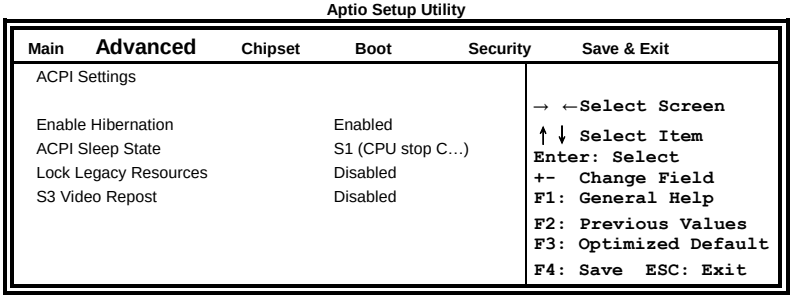

Enable Hibernation

Enables or Disables System ability to Hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

ACPI Sleep State

Select ACPI sleep state the system will enter, when the SUSPEND button is pressed.

Lock Legacy Resources

Enabled or Disabled Lock of Legacy Resources.

S3 Video Repost

Enable or disable S3 Video Repost.

Wake up event settings

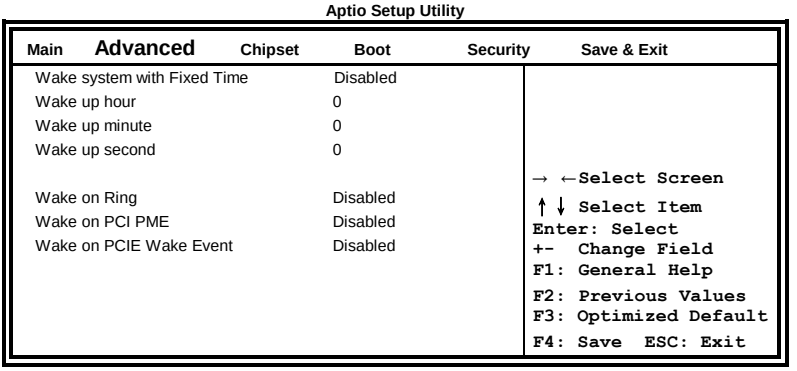
Aptio Setup Utility
Main Advanced Chipset Boot Security Save & Exit
Wake system with Fixed Time Disabled
Wake up hour 0
Wake up minute 0
Wake up second 0
Wake on Ring Disabled
Wake on PCI PME Disabled
Wake on PCIE Wake Event Disabled
→ ←Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

Wake system with Fixed Time

Enables or Disables System wake on alarm event. When enabled, System will wake on the hr::min:: sec specified.

Wake on PCIE PME Wake Event

The options are Disabled and Enabled.

Trusted Computing

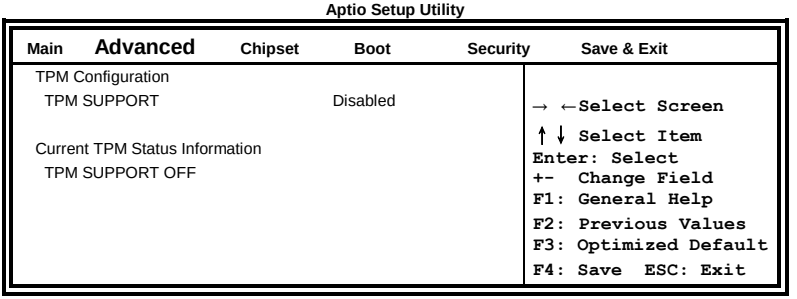

TPM Support

This configuration is supported only with MB960AF. Enables or Disables TPM support. O.S. will not show TPM. Reset of platform is required.

CPU Configuration

This section shows the CPU configuration parameters.

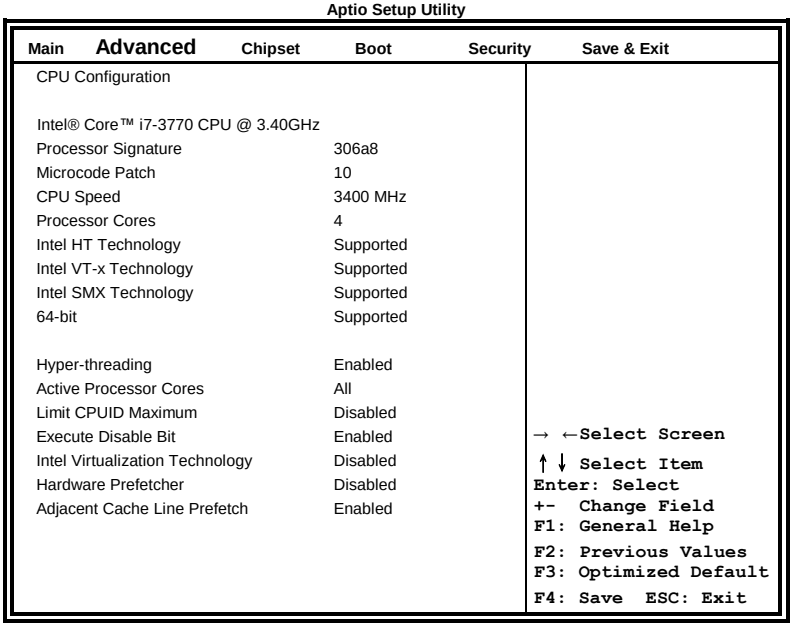

Hyper-threading

Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled, only one thread per enabled core is enabled.

Active Processor Cores

Number of cores to enable in each processor package.

Limit CPUID Maximum

Disabled for Windows XP.

Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, Re33dHat Enterprise 3 Update 3.)

Intel Virtualization Technology
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

Hardware Prefetcher
To turn on/off the Mid level Cache (L2) streamer Prefetcher.

Adjacent Cache Line Prefetch
To turn on/off prefetching of adjacent cache lines.

SATA Configuration
SATA Devices Configuration.

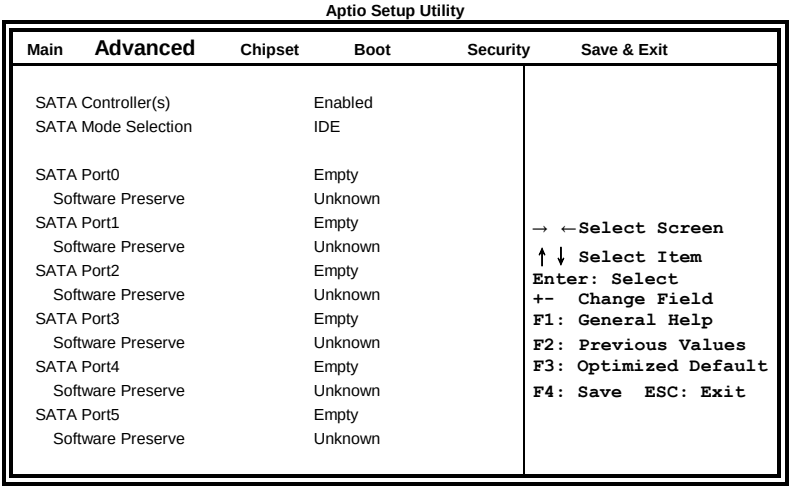

SATA Controller(s)
Enable / Disable Serial ATA Controller.

SATA Mode Selection
(1) IDE Mode.
(2) AHCI Mode.
(3) RAID Mode.

Shutdown Temperature Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
APCI Shutdown Temperature			Disabled		→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

ACPI Shutdown Temperature

The default setting is Disabled.

EuP/ErP Power Saving Controller

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Standby Power on S5			All Enable		[Enable Provide the Standby Power for devices. [Disable] Shutdown the standby power.

Standby Power on S5

This configuration is supported only with MB960F.

PCI IRQ Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
IRQ3			PCI/ISA		→ ←Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
IRQ4			PCI/ISA		
IRQ5			PCI/ISA		
IRQ6			PCI/ISA		
IRQ7			PCI/ISA		
IRQ10			PCI/ISA		
IRQ11			PCI/ISA		
IRQ12			PCI/ISA		

AMT Configuration

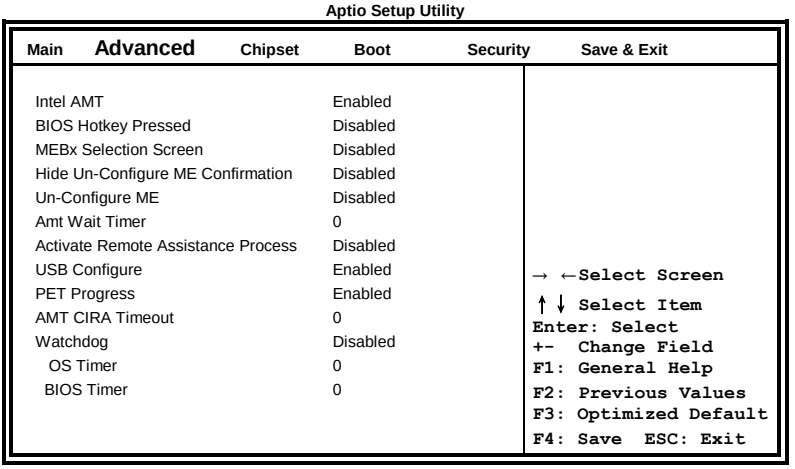

AMT Configuration

This configuration is supported only with MB960AF (with iAMT function). Options are Enabled and Disabled.
Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

Unconfigure ME

This configuration is supported only with MB960AF (with iAMT function). Perform AMT/ME unconfigure without password operation.

Amt Wait Timer

Set timer to wait before sending ASF_GET_BOOT_OPTIONS.

Activate Remote Assistance Process

Trigger CIRA boot.

PET Progress

User can Enable/Disable PET Events progress to receive PET events or not.

Watchdog Timer

This configuration is supported only with MB960AF (with iAMT function). Enable/Disable Watchdog Timer.

Acoustic Management Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
Acoustic Management Configuration					
Acoustic Management			Disabled		

→ ←Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

USB Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					
USB Devices:					
2 Hubs					
Legacy USB Support			Enabled		
USB3.0 Support			Enabled		
XHCI Hand-off			Enabled		
EHCI Hand-off			Enabled		
USB hardware delays and time-outs:					
USB Transfer time-out			20 sec		
Device reset tine-out			20 sec		
Device power-up delay			Auto		

→ ←Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

Legacy USB Support

Enables Legacy USB support.
AUTO option disables legacy support if no USB devices are connected.
DISABLE option will keep USB devices available only for EFI applications.

USB3.0 Support

Enable/Disable USB3.0 (XHCI) Controller support.

XHCI Hand-off

This is a workaround for OSes without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

EHCI Hand-off
Enabled/Disabled. This is a workaround for OSes without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB Transfer time-out
The time-out value for Control, Bulk, and Interrupt transfers.

Device reset tine-out
USB mass Storage device start Unit command time-out.

Device power-up delay
Maximum time the device will take before it properly reports itself to the Host Controller. 'Auto' uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.

F81865 Super IO Configuration

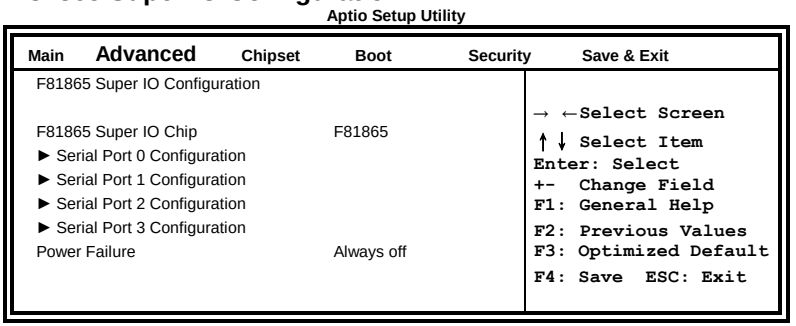

Serial Port Configuration
Set Parameters of serial ports. User can Enable/Disable the serial port and select an optimal settings for the Super IO Device.

Power Failure
Options are:
Keep last state
Bypass mode
Always on
Always off (default)

F81865 H/W Monitor

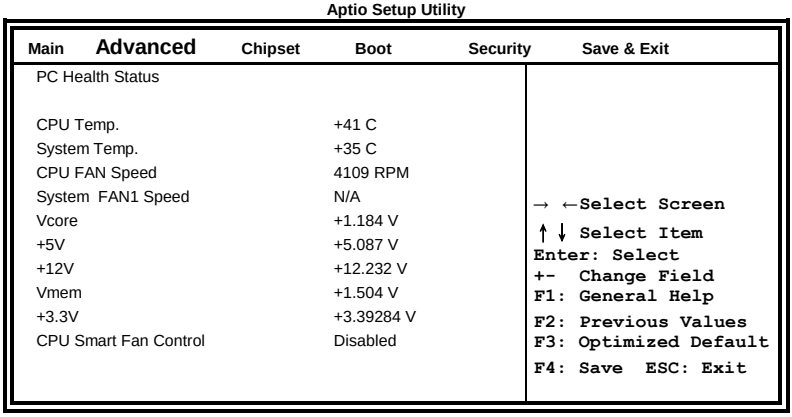

Temperatures/Voltages

These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status.

Fan1/Fan2 Smart Fan Control

This field enables or disables the smart fan feature. At a certain temperature, the fan starts turning. Once the temperature drops to a certain level, it stops turning again.

CPU PPM Configuration

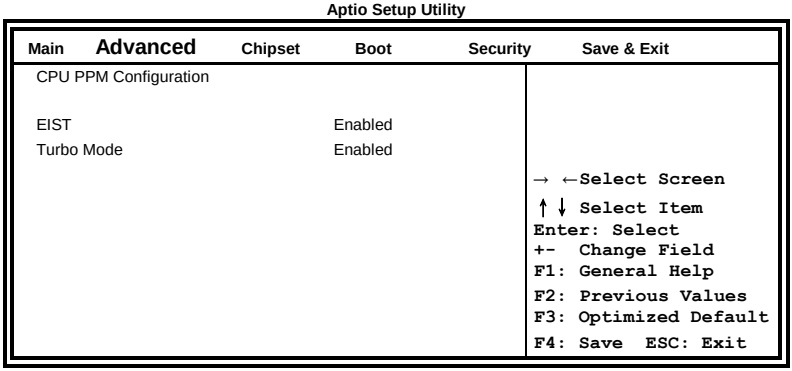

EIST

Enable/Disable Intel SpeedStep.

Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

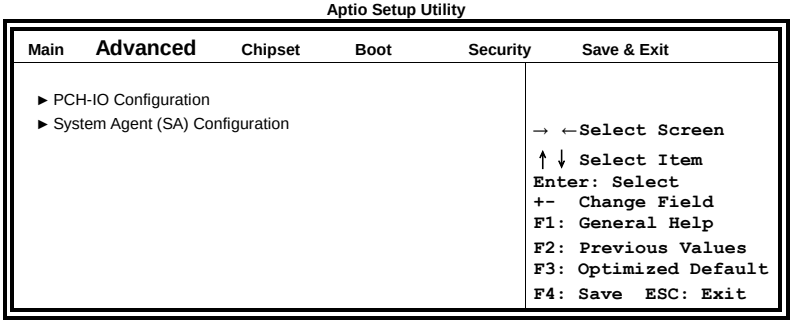

PCH-IO Configuration

This section allows you to configure the North Bridge Chipset.

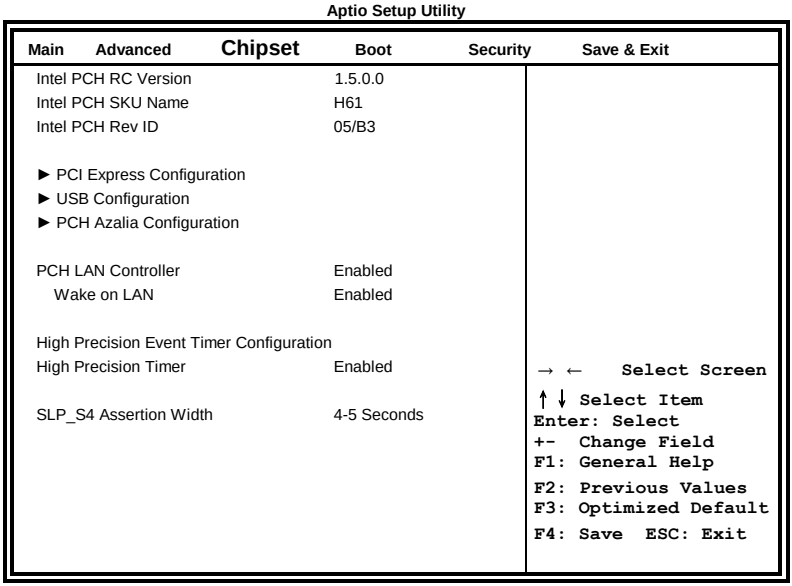
Aptio Setup Utility
Main Advanced Chipset Boot Security Save & Exit
Intel PCH RC Version 1.5.0.0
Intel PCH SKU Name H61
Intel PCH Rev ID 05/B3
► PCI Express Configuration
► USB Configuration
► PCH Azalia Configuration
PCH LAN Controller Enabled
Wake on LAN Enabled
High Precision Event Timer Configuration
High Precision Timer Enabled
SLP_S4 Assertion Width 4-5 Seconds
→ ← Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

PCH LAN Controller

Enable or disable onboard NIC.

Wake on LAN

Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.)

SLP_S4 Assertion Width

Select a minimum assertion width of the SLP_S4# signal.

PCI Express Configuration

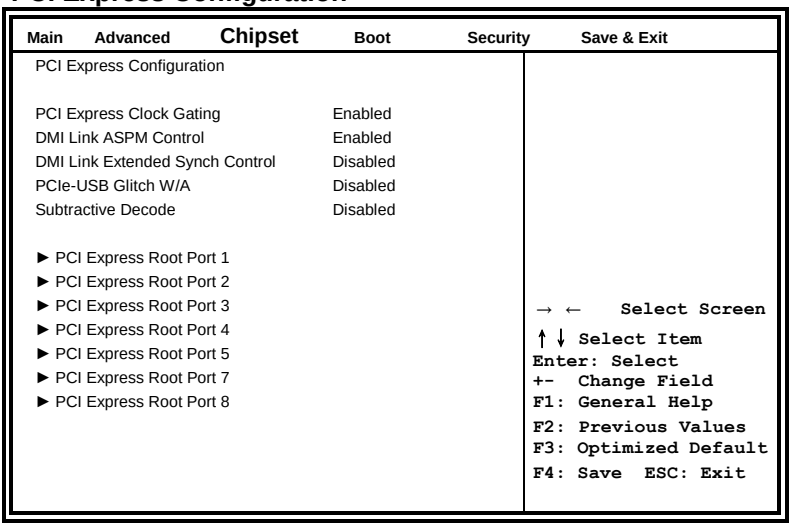
Main Advanced Chipset Boot Security Save & Exit
PCI Express Configuration
PCI Express Clock Gating Enabled
DMI Link ASPM Control Enabled
DMI Link Extended Synch Control Disabled
PCIe-USB Glitch W/A Disabled
Subtractive Decode Disabled
► PCI Express Root Port 1
► PCI Express Root Port 2
► PCI Express Root Port 3
► PCI Express Root Port 4
► PCI Express Root Port 5
► PCI Express Root Port 7
► PCI Express Root Port 8
→ ← Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

PCI Express Clock Gating

Enable or disable PCI Express Clock Gating for each root port.

DMI Link ASPM Control

The control of Active State Power Management on both NB side and SB side of the DMI link.

PCIe-USB Glitch W/A

PCIe-USB Glitch W/A for bad USB device(s) connected behind PCIE/PEG port.

USB Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					→ ← Select Screen
EHCI1			Enabled		↑ ↓ Select Item
EHCI2			Enabled		Enter: Select +- Change Field F1: General Help
USB Ports Per-Port Disable Control			Disabled		F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

EHCI1/2

Control the USAB EHCI (USB 2.0) functions. One EHCI controller must always be enabled.

USB Ports Per-Port Disable Control

Control each of the USB ports (0~13) disabling.

PCH Azalia Configuration

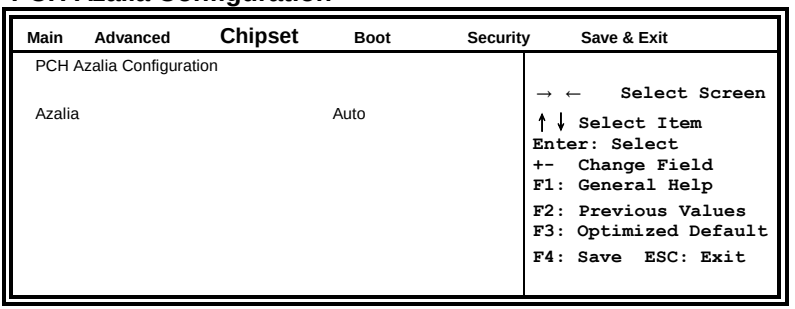

Azalia

Control Detection of the Azalia device.
Disabled = Azalia will unconditionally disabled.
Enabled Azalia will be unconditionally enabled.
Auto = Azalia will be enabled if present, disabled otherwise.

System Agent (SA) Configuration

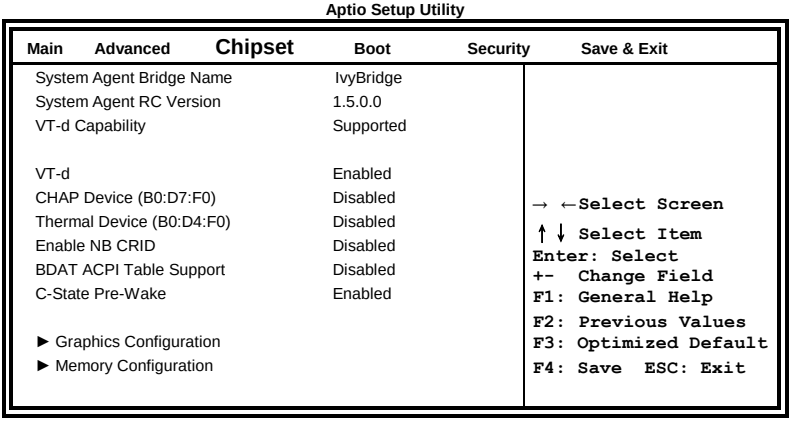

VT-d

Check to enable VT-d function on MCH.

Enable NB CRID

Enable or disable NB CRID WorkAround.

C-State Pre-Wake

Controls C-State Pre-Wake feature for ARAT, in SSKPD[57].

Graphics Configuration

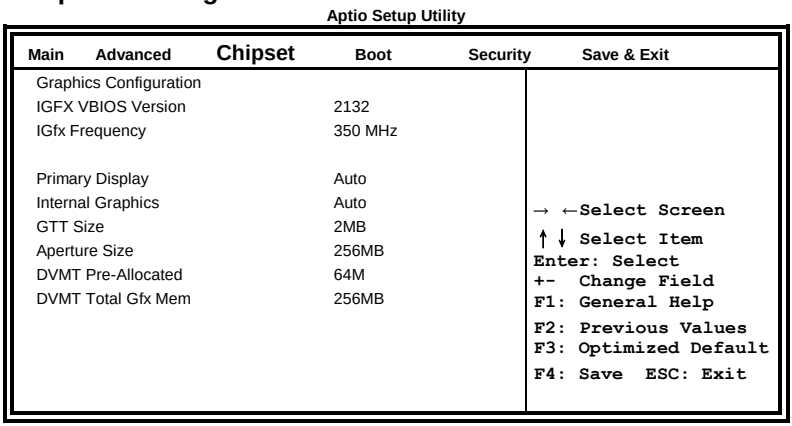

Primary Display

Select which of IGFX/PEG/PCI graphics device should be primary display or select SG for switchable Gfx.

Internal Graphics

Keep IGD enabled based on the setup options.

DVMT Pre-Allocated

Select DVMT 5.0 Pre-Allocated (Fixed) graphics memory size used by the internal graphics device.

DVMT Total Gfx Mem

Select DVMT 5.0 total graphics memory size used by the internal graphics device.

Memory Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit

Memory Information		
Memory Frequency	1067 MHz	
Total Memory	1024 MB (DDR3)	
DIMM#0	1024 MB (DDR3)	
DIMM#1		
DIMM#2		
DIMM#3		
CAS Latency (tCL)	7	
Minimum delay time		
CAS to RAS (tRCDmin)	7	
Row Precharge (tRPmin)	7	
Active to Precharge (tRASmin)	20	

→ ←Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

Boot Settings

This section allows you to configure the boot settings.

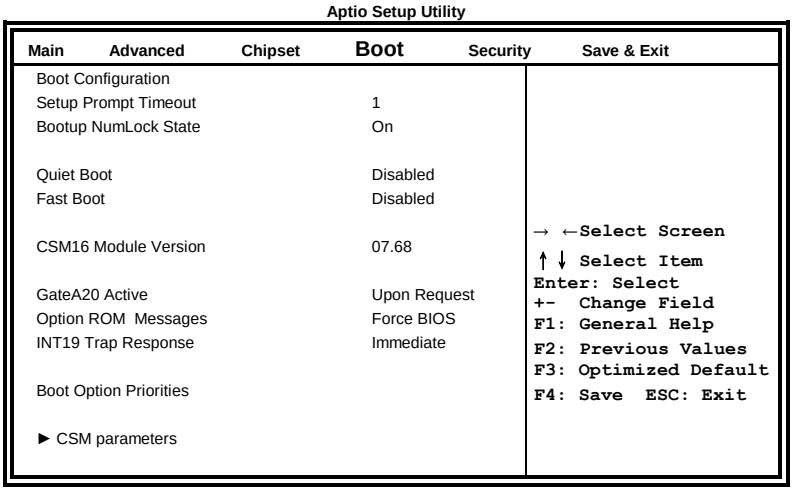

Setup Prompt Timeout

Number of seconds to wait for setup activation key.
65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Quiet Boot

Enables/Disables Quiet Boot option.

Fast Boot

Enables/Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

GateA20 Active

UPON REQUEST – GA20 can be disabled using BIOS services.
ALWAYS – do not allow disabling GA20; this option is useful when any RT code is executed above 1MB.

Option ROM Messages

Set display mode for Option ROM. Options are Force BIOS and Keep Current.

INT19 Trap Response
Enable: Allows Option ROMs to trap Int 19.

Boot Option Priorities
Sets the system boot order.

CSM parameters
This section allows you to configure the boot settings.

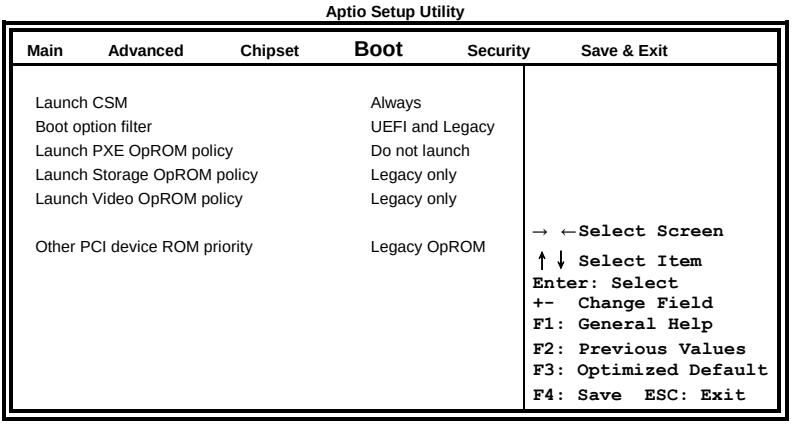

Boot option filter
This option controls what devices system can boot to.

Launch PXE OpROM policy
Controls the execution of UEFI and Legacy PXE OpROM.

Launch Storatge OpROM policy
Controls the execution of UEFI and Legacy Storage OpROM.

Launch Video OpROM policy
Controls the execution of UEFI and Legacy Video OpROM.

Other PCI device ROM priority
For PCI devices other than Network, Mass storage or Video defines which OpROM to launch.

Security Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

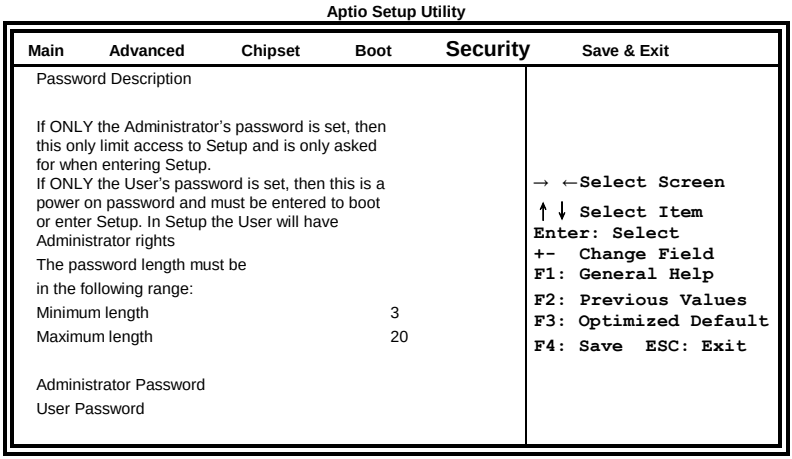
Aptio Setup Utility
Main
Advanced
Chipset
Boot
Security
Save & Exit
Password Description
If ONLY the Administrator's password is set, then this only limit access to Setup and is only asked for when entering Setup.
If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights
The password length must be
in the following range:
Minimum length 3
Maximum length 20
Administrator Password
User Password
→ ←Select Screen
↑ ↓ Select Item
Enter: Select
+- Change Field
F1: General Help
F2: Previous Values
F3: Optimized Default
F4: Save ESC: Exit

Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

Save & Exit Settings

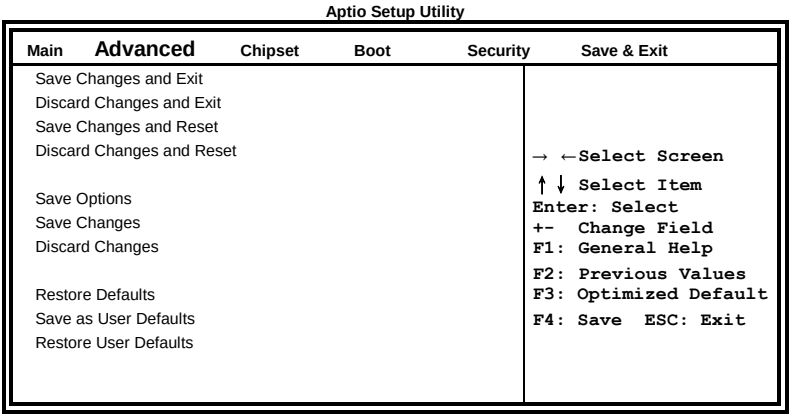

Save Changes and Exit
Exit system setup after saving the changes.

Discard Changes and Exit
Exit system setup without saving any changes.

Save Changes and Reset
Reset the system after saving the changes.

Discard Changes and Reset
Reset system setup without saving any changes.

Save Changes
Save Changes done so far to any of the setup options.

Discard Changes
Discard Changes done so far to any of the setup options.

Restore Defaults
Restore/Load Defaults values for all the setup options.

Save as User Defaults
Save the changes done so far as User Defaults.

Restore User Defaults
Restore the User Defaults to all the setup options.

Drivers Installation

This section describes the installation procedures for software and drivers. The software and drivers are included with the motherboard. If you find the items missing, please contact the vendor where you made the purchase. The contents of this section include the following:

Intel Chipset Software Installation Utility 46
VGA Drivers Installation..... 47
Realtek HD Audio Driver Installation 48
LAN Drivers Installation 49
Intel® Management Engine Interface 51
ASMedia USB 3.0 Drivers 53

IMPORTANT NOTE:
After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

Intel Chipset Software Installation Utility

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the CD that comes with the board. Click ***Intel*** and then ***Intel(R) QM67/Q67 Chipset Drivers***.

2. Click ***Intel(R) Chipset Software Installation Utility.***

3. When the Welcome screen to the Intel® Chipset Device Software appears, click ***Next*** to continue.

4. Click ***Yes*** to accept the software license agreement and proceed with the installation process.

5. On the Readme File Information screen, click ***Next*** to continue the installation.

6. The Setup process is now complete. Click ***Finish*** to restart the computer and for changes to take effect.

VGA Drivers Installation

NOTE: Before installing the *Intel(R) Q67 Chipset Family Graphics Driver,* the Microsoft .NET Framework 3.5 SPI should be installed.

To install the VGA drivers, follow the steps below.
1. Insert the CD that comes with the board. Click ***Intel*** and then ***Intel(R) QM67/Q67 Chipset Drivers***.

2. Click ***Intel(R) Q67 Chipset Family Graphics Driver.***

3. When the Welcome screen appears, click ***Next*** to continue.

Intel® Installation Framework
Intel® HD Graphics Driver
Welcome to the Setup Program
intel
This setup program will install the following components:
- Intel® HD Graphics Driver
It is strongly recommended that you exit all programs before continuing. Click Next to continue.

4. Click ***Yes*** to to agree with the license agreement and continue the installation.

5. On the Readme File Information screen, click ***Next*** to continue the installation of the Intel® Graphics Media Accelerator Driver.

6. On Setup Progress screen, click ***Next*** to continue.

7. Setup complete. Click ***Finish*** to restart the computer and for changes to take effect.

Realtek HD Audio Driver Installation

Follow the steps below to install the Realtek HD Audio Drivers.
1. Insert the CD that comes with the board. Click ***Intel*** and then ***Intel(R) QM67/Q67 Chipset Drivers***.

2. Click ***Realtek High Definition Audio Driver.***

3. On the Welcome to the InstallShield Wizard screen, click ***Yes*** to proceed with and complete the installation process.

Realtek High Definition Audio Driver Setup (3.07) R2.52
Realtek High Definition Audio Driver R2.52
Realtek High Definition Audio Driver - InstallShield Wizard
Welcome to the InstallShield Wizard
The InstallShield Wizard will install Realtek High Definition Audio Driver on your computer .
Do you want to continue the installation of new driver ?
Yes
No

LAN Drivers Installation

1. Insert the CD that comes with the board. Click ***Intel*** and then ***Intel(R) QM67/Q67 Chipset Drivers***.

2. Click ***Intel(R) PRO LAN Network Driver.***

3. When the Welcome screen appears, click ***Next***. On the next screen, click ***Yes*** to to agree with the license agreement.

4. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.

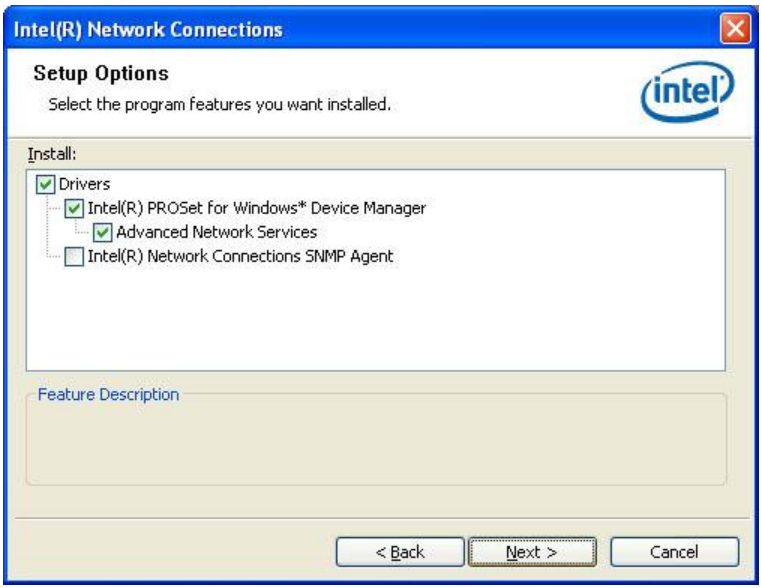

5. The wizard is ready to begin installation. Click ***Install*** to begin the installation.

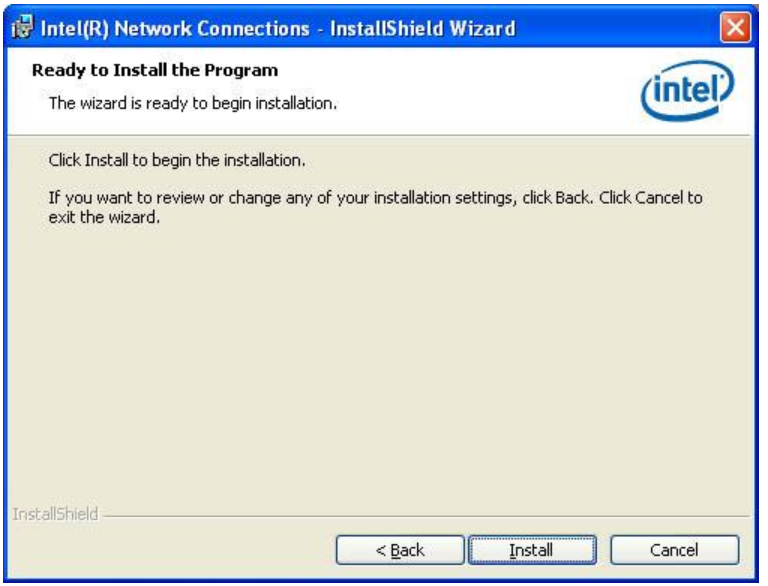
Intel(R) Network Connections - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

6. When InstallShield Wizard is complete, click ***Finish***.

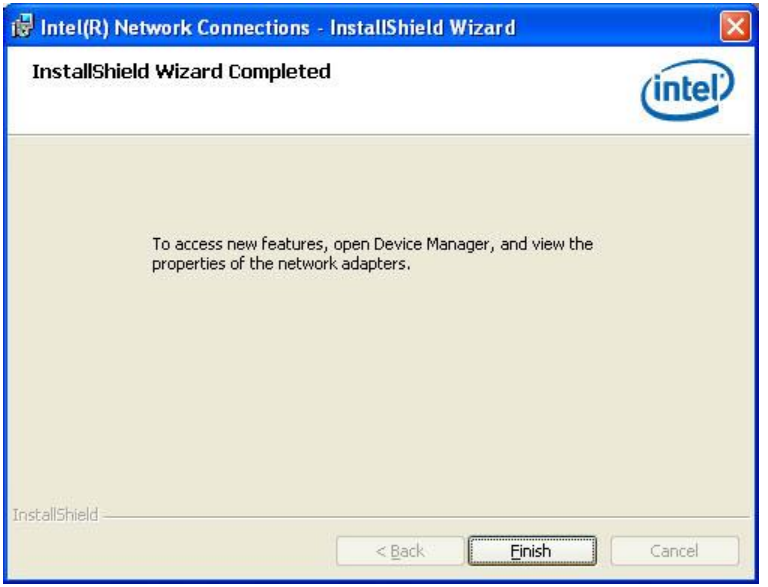
Intel(R) Network Connections - InstallShield Wizard
InstallShield Wizard Completed
To access new features, open Device Manager, and view the properties of the network adapters.
InstallShield
< Back
Finish
Cancel

Intel® Management Engine Interface

REMARKS: The Intel iAMT 7.0 Drivers can be installed on MB960AF, not MB960F.

The following application requires Microsoft .NET Framework 3.5 or later: Intel® Management Engine Components. Please install the latest version of Microsoft .NET Framework from Microsoft Download Center to run this application correctly.

Follow the steps below to install the Intel Management Engine.

1. Insert the CD that comes with the board. Click ***Intel*** and then ***Intel(R) AMT 7.0 Drivers***.

2. When the Welcome screen to the InstallShield Wizard for Intel® Management Engine Components, click ***Next***. On the next screen, click ***Yes*** to to agree with the license agreement.

Intel® Management Engine Components
Intel® Management Engine Components
License Agreement
intel
You must accept all of the terms of the license agreement in order to continue the setup program. Do you accept the terms?
INTEL SOFTWARE LICENSE AGREEMENT (OEM / IHV / ISV Distribution & Single User)
IMPORTANT - READ BEFORE COPYING, INSTALLING OR USING.
Do not use or load this software and any associated materials (collectively, the "Software") until you have carefully read the following terms and conditions. By loading or using the Software, you agree to the terms of this Agreement. If you do not wish to so agree, do not install or use the Software.
Please Also Note:
* If you are an Original Equipment Manufacturer (OEM), Independent Hardware Vendor (IHV), or Independent Software Vendor (ISV), this complete LICENSE AGREEMENT applies;
* If you are an End-User, then only Exhibit A, the INTEL SOFTWARE LICENSE AGREEMENT,
< Back
Yes
No
Intel® Installation Framework

2. When the Setup Progress screen appears, click ***Next***. Then, click ***Finish*** when the setup progress has been successfully installed.

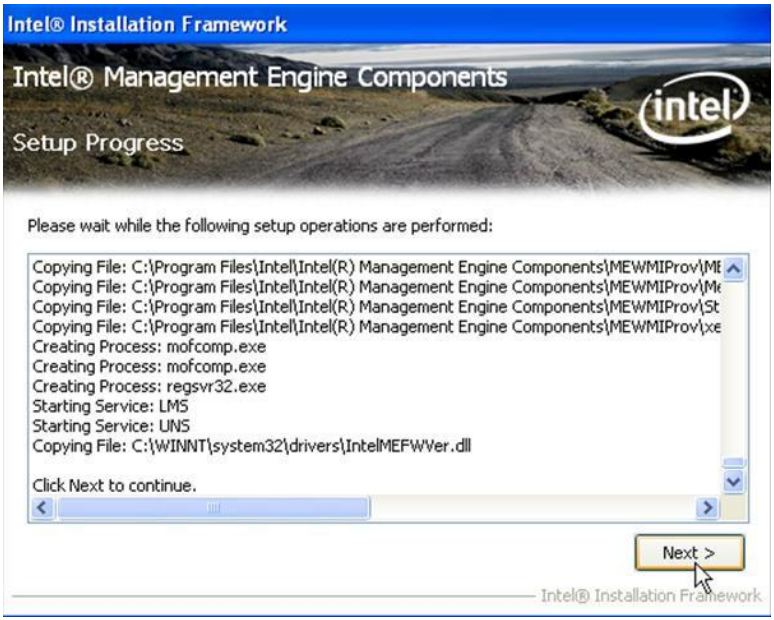
Intel® Installation Framework
Intel® Management Engine Components
Setup Progress
Please wait while the following setup operations are performed:
Copying File: C:\Program Files\Intel\Intel(R) Management Engine Components\MEWMIProv\ME
Copying File: C:\Program Files\Intel\Intel(R) Management Engine Components\MEWMIProv\Me
Copying File: C:\Program Files\Intel\Intel(R) Management Engine Components\MEWMIProv\St
Copying File: C:\Program Files\Intel\Intel(R) Management Engine Components\MEWMIProv\xe
Creating Process: mofcomp.exe
Creating Process: mofcomp.exe
Creating Process: regsvr32.exe
Starting Service: LMS
Starting Service: UNS
Copying File: C:\WINNT\system32\drivers\IntelMEFWVer.dll
Click Next to continue.
Next >
Intel® Installation Framework

Intel® Installation Framework
Intel® Management Engine Components
Setup Is Complete
The setup program successfully installed the following components:
- Intel® Management Engine Interface
- Serial Over LAN
- Local Management Service
- User Notification Service
Click Finish to complete the setup process.
Finish

ASMedia USB 3.0 Drivers

1. Insert the CD that comes with the board. Click ***Intel*** and then ***Intel(R) QM67/Q67 Chipset Drivers***.

2. Click ***Intel(R) PRO LAN Network Driver.***

2. When the Welcome screen to the InstallShield Wizard for Intel® Management Engine Components, click ***Next***.

Asmedia ASM104x USB 3.0 Host Controller Driver - InstallShield Wizard
Welcome to the InstallShield Wizard for Asmedia ASM104x USB 3.0 Host Controller Driver
The InstallShield(R) Wizard will install Asmedia ASM104x USB 3.0 Host Controller Driver on your computer. To continue, click Next.

3. When InstallShield Wizard is complete, click ***Finish***.

Appendix

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 03Fh	Interrupt Controller #1
040h - 05Fh	Timer
060h - 06Fh	Keyboard Controller
070h - 07Fh	Real Time Clock, NMI
080h - 09Fh	DMA Page Register
0A0h - 0BFh	Interrupt Controller #2
0C0h - 0DFh	DMA Controller #2
0F0h	Clear Math Coprocessor Busy Signal
0F1h	Reset Math Coprocessor
1F0h - 1F7h	IDE Interface
2F8h - 2FFh	Serial Port #2(COM2)
2B0h- 2DFh	Graphics adapter Controller
360h - 36Fh	Network Ports
3F8h - 3FFh	Serial Port #1(COM1)

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ8	Real Time Clock
IRQ14	Primary IDE
IRQ15	Secondary IDE

C. Watchdog Timer Configuration

The WDT is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven. Under normal circumstance, the user will restart the WDT at regular intervals before the timer counts to zero.

SAMPLE CODE:

```
//---------------------------------------------------------------------------
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//---------------------------------------------------------------------------
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "F81865.H"
//---------------------------------------------------------------------------
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//---------------------------------------------------------------------------
int main (int argc, char *argv[])
{
        unsigned char bBuf;
        unsigned char bTime;
        char **endptr;

        char SIO;

        printf("Fintek 81865 watch dog program\n");

        SIO = Init_F81865();
        if (SIO == 0)
        {
                printf("Can not detect Fintek 81865, program abort.\n");
                return(1);
        }//if (SIO == 0)

        if (argc != 2)
        {
                printf(" Parameter incorrect!!\n");
                return (1);
        }

        bTime = strtol (argv[1], endptr, 10);
        printf("System will reset after %d seconds\n", bTime);

        if (bTime)
        {       EnableWDT(bTime);  }
        else
        {       DisableWDT();          }

        return 0;
```

```
}
//---------------------------------------------------------------------------
void EnableWDT(int interval)
{
        unsigned char bBuf;

        bBuf = Get_F81865_Reg(0x2B);
        bBuf &= (~0x20);
        Set_F81865_Reg(0x2B, bBuf);                     //Enable WDTO

        Set_F81865_LD(0x07);                            //switch to logic device 7
        Set_F81865_Reg(0x30, 0x01);                     //enable timer

        bBuf = Get_F81865_Reg(0xF5);
        bBuf &= (~0x0F);
        bBuf |= 0x52;
        Set_F81865_Reg(0xF5, bBuf);                     //count mode is second

        Set_F81865_Reg(0xF6, interval);             //set timer

        bBuf = Get_F81865_Reg(0xFA);
        bBuf |= 0x01;
        Set_F81865_Reg(0xFA, bBuf);                     //enable WDTO output

        bBuf = Get_F81865_Reg(0xF5);
        bBuf |= 0x20;
        Set_F81865_Reg(0xF5, bBuf);                     //start counting
}
//---------------------------------------------------------------------------
void DisableWDT(void)
{
        unsigned char bBuf;

        Set_F81865_LD(0x07);                            //switch to logic device 7

        bBuf = Get_F81865_Reg(0xFA);
        bBuf &= ~0x01;
        Set_F81865_Reg(0xFA, bBuf);                     //disable WDTO output

        bBuf = Get_F81865_Reg(0xF5);
        bBuf &= ~0x20;
        bBuf |= 0x40;
        Set_F81865_Reg(0xF5, bBuf);                     //disable WDT
}
//---------------------------------------------------------------------------
```

```
//---------------------------------------------------------------------------
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//---------------------------------------------------------------------------
#include "F81865.H"
#include <dos.h>
//---------------------------------------------------------------------------
unsigned int F81865_BASE;
void Unlock_F81865 (void);
void Lock_F81865 (void);
//---------------------------------------------------------------------------
unsigned int Init_F81865(void)
{
	unsigned int result;
	unsigned char ucDid;

	F81865_BASE = 0x4E;
	result = F81865_BASE;

	ucDid = Get_F81865_Reg(0x20);
	if (ucDid == 0x07)                                  //Fintek 81865
	{	goto Init_Finish;	}

	F81865_BASE = 0x2E;
	result = F81865_BASE;

	ucDid = Get_F81865_Reg(0x20);
	if (ucDid == 0x07)                                  //Fintek 81865
	{	goto Init_Finish;	}

	F81865_BASE = 0x00;
	result = F81865_BASE;

Init_Finish:
	return (result);
}
//---------------------------------------------------------------------------
void Unlock_F81865 (void)
{
	outportb(F81865_INDEX_PORT, F81865_UNLOCK);
	outportb(F81865_INDEX_PORT, F81865_UNLOCK);
}
//---------------------------------------------------------------------------
void Lock_F81865 (void)
{
	outportb(F81865_INDEX_PORT, F81865_LOCK);
}
//---------------------------------------------------------------------------
void Set_F81865_LD( unsigned char LD)
{
	Unlock_F81865();
	outportb(F81865_INDEX_PORT, F81865_REG_LD);
	outportb(F81865_DATA_PORT, LD);
	Lock_F81865();
}
//---------------------------------------------------------------------------
void Set_F81865_Reg( unsigned char REG, unsigned char DATA)
{
	Unlock_F81865();
	outportb(F81865_INDEX_PORT, REG);
	outportb(F81865_DATA_PORT, DATA);
	Lock_F81865();
}
//---------------------------------------------------------------------------
```

```
unsigned char Get_F81865_Reg(unsigned char REG)
{
        unsigned char Result;
        Unlock_F81865();
        outportb(F81865_INDEX_PORT, REG);
        Result = inportb(F81865_DATA_PORT);
        Lock_F81865();
        return Result;
}
//-----------------------------------------------------------------------------
```

```
//-----------------------------------------------------------------------------
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----------------------------------------------------------------------------
#ifndef __F81865_H
#define __F81865_H                     1
//-----------------------------------------------------------------------------
#define F81865_INDEX_PORT       (F81865_BASE)
#define F81865_DATA_PORT        (F81865_BASE+1)
//-----------------------------------------------------------------------------
#define F81865_REG_LD           0x07
//-----------------------------------------------------------------------------
#define F81865_UNLOCK           0x87
#define F81865_LOCK                     0xAA
//-----------------------------------------------------------------------------
unsigned int Init_F81865(void);
void Set_F81865_LD( unsigned char);
void Set_F81865_Reg( unsigned char, unsigned char);
unsigned char Get_F81865_Reg( unsigned char);
//-----------------------------------------------------------------------------
#endif  //__F81865_H
```

This page is intentionally left blank.